

Control4 Keypad User Guide

Control4 Keypads are fully programmable to user-specific settings. The 5 rectangular buttons indicate 5 separate "Scenes," which are preset, programmed lighting options. TVTi will temporarily program and label your keypad buttons to operate the lighting Scenes in each individual room. After initial lighting Scene programming, we will follow up after 2-3 weeks to confirm programming is as desired, at which time TVTi can order engraved labeled buttons.

The 2 buttons at the bottom with Down and Up arrow buttons control the dimming level of the lights programmed to the last button pressed. The keypad button programming is capable of going to preset dimming levels, or full On/Off. The arrow buttons will override the programmed levels while the Scene is On, but the Scene will revert to the programming when turned on next.

Using the Keypad

From "Off" setting:

1. Press the lighting Keypad Button that you want to be active
2. You may now do the following:
 - a. Turn off the lights by pressing the same Keypad Button
 - b. Change the active Scene by pressing a different Keypad Button
 - c. Temporarily dim the active Scene settings with the Dimmer Buttons

BLANK C4-KD120 Wireless Keypad

